


Indoor (Fold Down)


Online Instructions

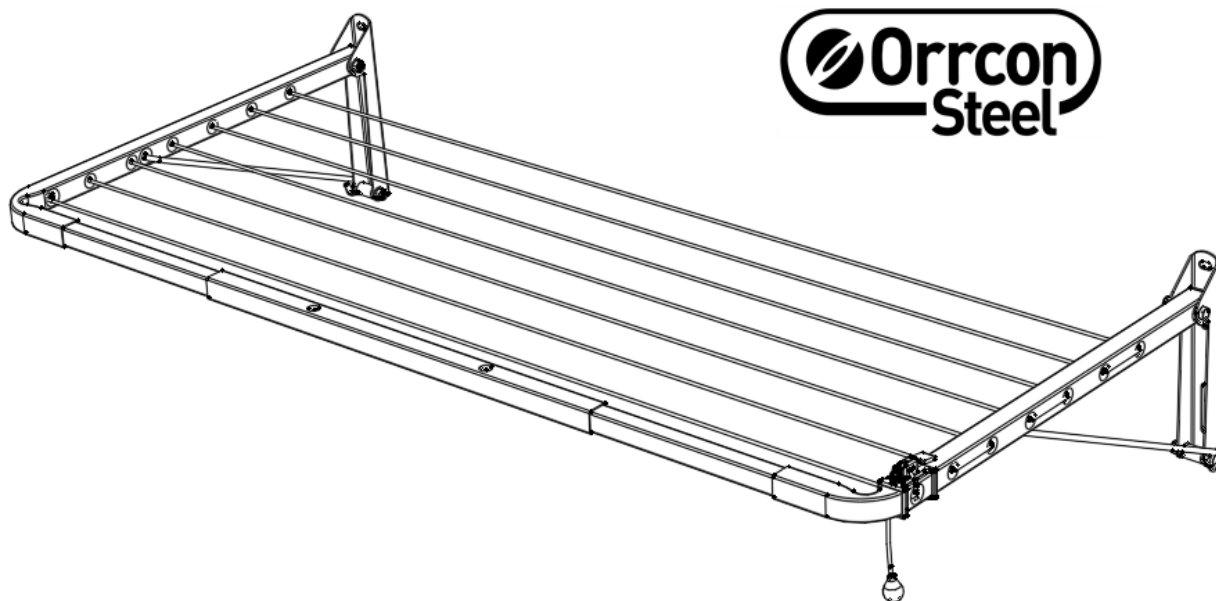

Number of People




Area Required

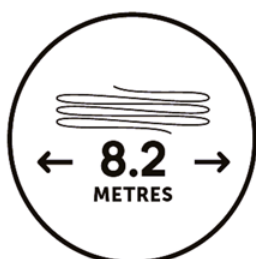


Line Space



Weight

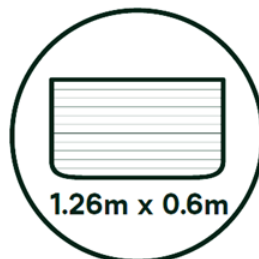

Dimensions

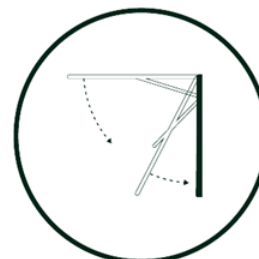

Easily Folds Down

INDEX

• PARTS SUPPLIED / TOOLS REQUIRED	Page 2	• OPERATING YOUR CLOTHESLINE	Page 5
• SITE SELECTION	Page 2	• INSTALLATION TIPS	Page 6
• MOUNTING OPTIONS	Page 2	• AUSTRAL LOCATION	Page 6
• INSTALLATION	Page 2	• MANUFACTURER'S WARRANTY	Page 7

PARTS SUPPLIED

- 2 x Pre-Assembled Arms
- 2 x Spacer Bars @ 430mm
- 1 x Joiner Bar @ 535mm
- Cord (10m)
- 1 x Accessory Pack containing;
 - 1 x Installation Instruction
 - 4 x 14g x 2" Csk S/tappers
 - 4 x M8 Wall Plugs
 - 2 x Endcaps
 - L.T.L. Knob
 - Hole template

TOOLS REQUIRED

- Spirit level
- Pencil
- Tape measure
- Cordless Drill (with hammer function if drilling masonry)
- 2 x 13mm Spanners / Shifter
- Scissors / Knife

SITE SELECTION

- Select an area that is suitable for your installation. You will require an area around 1.4m wide and 0.7m deep.

MOUNTING OPTIONS

WALL INSTALLATION

Requires the following additional items:

Products

N/A

Hard Walls

4x 14g (Ø6.3mm) x 50mm screws

4x 8mm wall plugs

Timber Walls

4x 14g (Ø6.3mm) x 50mm screws

GMK INSTALLATION

No GMK available

CORD HEIGHT

- The recommended height is 50mm above user's head height.
-

FIXINGS

- Fixings for wall installations are supplied.
- When fixing to alternative surfaces such as weatherboard, fibro, blueboard etc. fix directly to the stud - alternatively support battens should be used.

INSTALLATION

INSTALLATION TO WALL

1. Using the hole template provided mark the holes at 1,200mm centres.
2. Drill holes using a 8mm masonry drill bit. For timber, drill pilot holes at 4mm for softwood or 6mm for hardwood.
3. Tap in the supplied wall plugs (Masonry install only).
4. Fit both left and right arm assemblies using the fasteners supplied. Do not tighten all the way, (leave loose).
5. Insert one end of the front bar into one arm, repeat for the other side and then finish tightening the wall fasteners.
6. Start cording at the rear left-hand hole, tie a knot in the cord to stop it pulling through. (Fig 1)
7. Working across and toward the front of the clothesline finish at the Line Tension Lock (L.T.L.) front right. (Fig 1)
8. Tie off the cord and lock the L.T.L. (Figs 2 & 3)
9. Leave approx. 150mm past the L.T.L. and cut away the remaining cord.
10. Slide the L.T.L. knob onto the cord, tie a knot in the end of the cord and then slide the knob down over it.
11. Install plastic plugs to back of the arms. (Fig 4)
12. Installation complete.

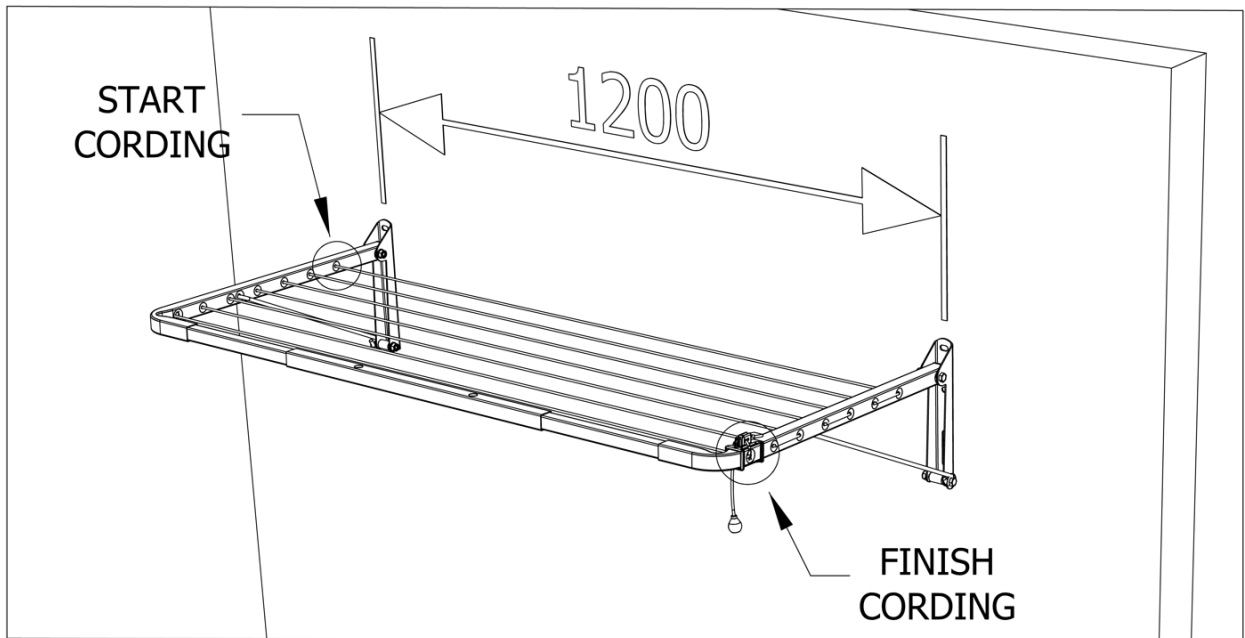


Fig 1. Indoor fitted to wall / Cord start stop positions.

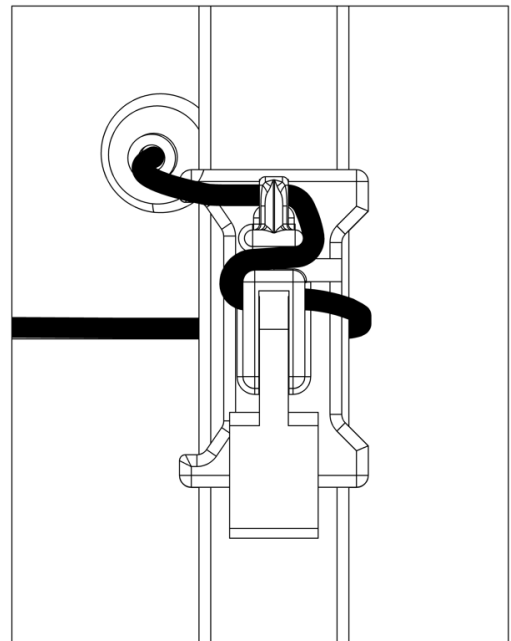
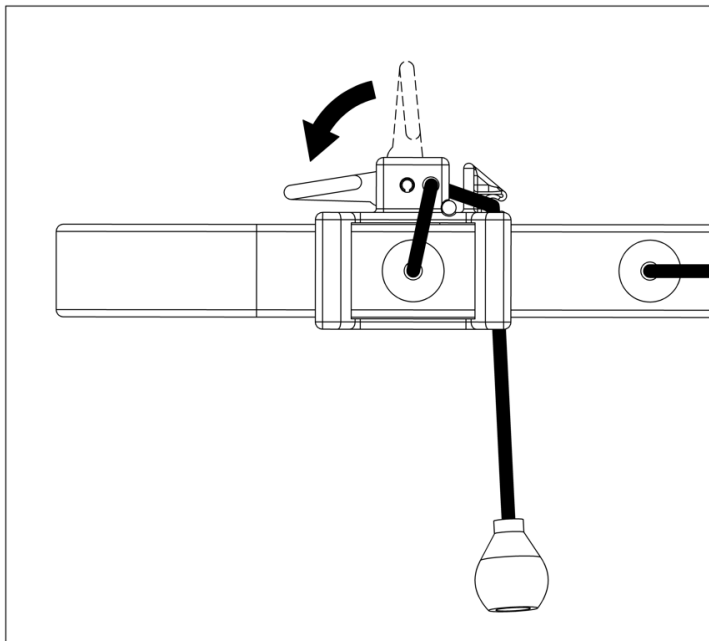


Fig 2. Pull cord tight, feed through hole in L.T.L. and lock down lever. Fig 3. Wrap cord as above and fit knob.

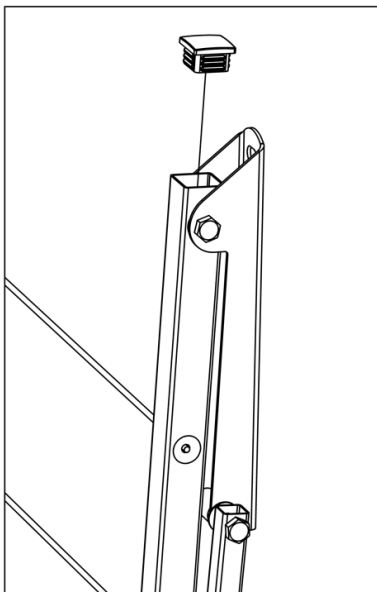


Fig 4. Plastic plugs to arm.

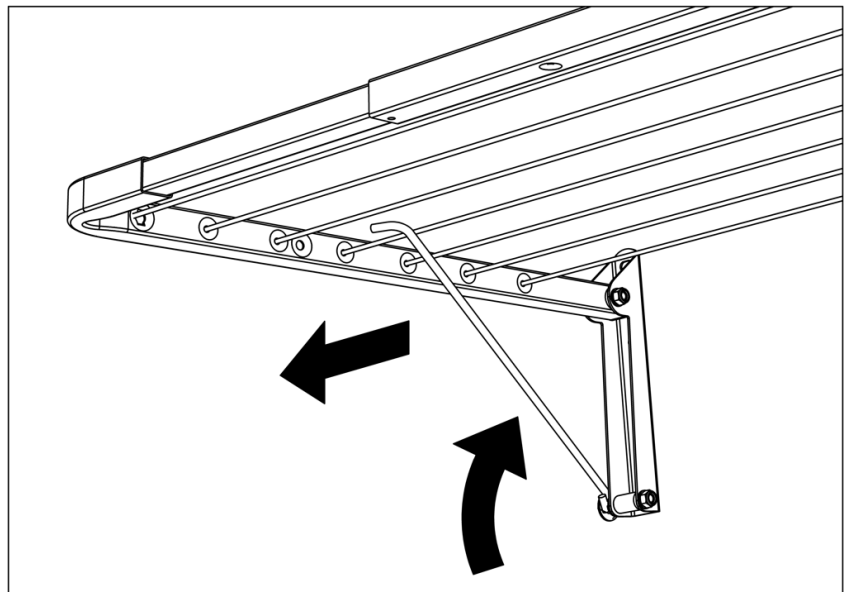


Fig 5. Operating wire stay.

REDUCING WIDTH

It is possible to reduce the width of your **Indoor** Clothesline.

1. Measure the new mounting centres. For this example let's use 1,000mm.
2. Deduct the new mounting centres from the original centres. (1,200 – 1,000mm = 200mm)
3. Using a hacksaw or angle grinder remove 100mm from the 430mm front spacer bars.
4. The spacer bars will now measure: (430mm – 100mm = **330mm**)
5. The clothesline is now ready to install.

OPERATING YOUR FOLD DOWN CLOTHESLINE

TO SET UP:

- Using both hands grab the front bar in the centre and lift upward.
- Moving to one side grab the wire stay and locate it into the hole in the arm. (Fig 5)
- Move to the other side and put the other wire stay in the hole in the other arm.

TO FOLD DOWN:

- Simply reverse the steps above.

INSTALLATION TIPS

HAMMER DRILL:

- Hammer drill bits often travel when starting a hole. Start slow, with firm pressure and without the hammer to create a small indentation, then increase speed and switch to hammer. After the first hole, recheck marks for remaining holes.

ADDITIONAL NOTES:

- Rain-soaked clothes can be up to 3 times heavier than spun dry washing which can put extra strain on your clothesline, causing damage. Please remove your washing when rain is expected.
- Clothes, sheets and towels can act like a sail capturing the wind, and in turn damaging your clothesline. Please remove washing prior to any expected high winds.
- Periodically, check all fasteners to ensure the safety and longevity of your clothesline.

DISSASSEMBLY:

- The warranty will not cover any product that has been tampered with.
- For any operational issues please contact Austral head office.

LOCATION

HEAD OFFICE:

- Austral Clothes Hoists Pty Ltd
32-34 Hydrive Close, Dandenong South, VIC. 3175
T: 61 3 9799 8122
E: admin@australcl.com.au
W: australclotheslines.com.au

Contact Head Office for Spare Parts, Accessories and Warranty Claims.

MANUFACTURER'S WARRANTY

Austral Clothes Hoists Pty Ltd ("Austral") provides the following warranty in relation to its Clotheslines products ("Product").

Subject to the exclusions below, Austral warrants:

- **For 12 months from date of purchase:** The repair or replacement, in its discretion, of any Product that fails to operate correctly due to faulty workmanship or defective materials. The "materials" includes the plastic components and cord.
- **For 20 years from date of purchase:** The repair or replacement, in its discretion, of any part of the tubular frame that is broken or distorted as a direct result of rust. The "tubular frame" comprises the circular, square or rectangular hollow steel frame on powder coated or galvanised Product.

The benefits of this warranty are in addition to the non-excludable rights and remedies imposed by Australian State and Federal legislation.

WARRANTY CLAIMS:

- To make a warranty claim, please contact your place of purchase or your local Distributor with details of the alleged defect and your original receipt as proof of purchase. Where it is deemed necessary, Austral will arrange for the inspection of your Product.
- You must bear the cost of making the Warranty claim. Austral will bear the cost of repairing or replacing defective Product (including freight or Postage of replacement Product).

WARRANTY EXCLUSIONS:

- Austral's Products are suitable for air drying purposes.

THE WARRANTY DOES NOT COVER:

- Defects caused through abuse or misuse.
- Incorrect adjustments or unauthorised repairs.
- Defects caused by incorrect installation.
- Product damage or deterioration due to abnormal environmental conditions including extreme coastal, storm damage, fire, wind, humidity, pressure, stress and similar.
- Powder coat deterioration caused by exposure to sea air where the Product is installed in coastal areas.
- Defects caused through normal wear and tear.
- Defects caused through the installation or use of a clothesline cover or sunshade.

SPARE PARTS:

- Austral maintains stock of spare parts for a reasonable period of time. Spare parts may not be available for the entire duration of this Warranty.
- Austral reserves the right to repair or replace defective Product with parts and components of similar quality, grade and composition where an identical part or component is not available.
- Goods presented for repair may be replaced by refurbished goods of the same type rather than being repaired.

LIMITATIONS:

- Austral makes no express warranties or representations other than as set out in this warranty. The repair or replacement of the Product or part of the Product is the absolute limit of Austral's liability under this express warranty.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.